


BREW MONK™ STAINLESS STEEL FERMENTER

1.

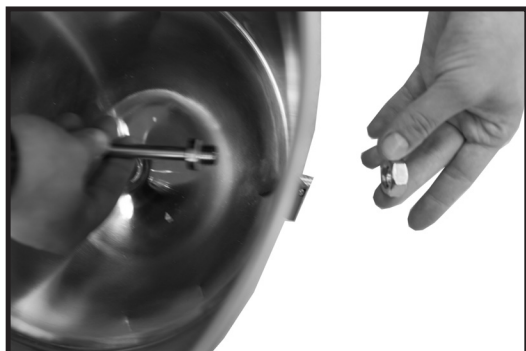

Install the thermowell.

2.



Make sure the nut is screwed on properly.

3.



Install the black rubber.

4.



Insert the thermometer.